

# DF-390

## Quick Reference

Make sure that the Digi-Frame is turned off.




Insert your Memory card with JPEG format digital pictures. The DF-390 accepts both SmartMedia & CompactFlash memory cards. Insert them as shown.

Turn your Digi-Frame on.

The Slideshow will begin automatically.

Customize and save your slideshows using the Menu System.

Enjoy your Digital Pictures!

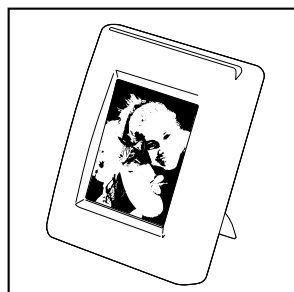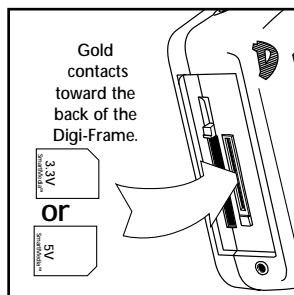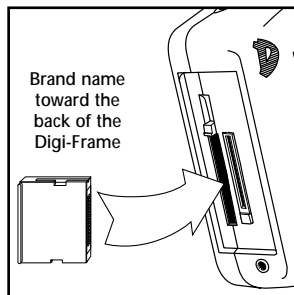

### WARNINGS!



Do Not Block the Ventilation Holes on the back of the Digi-Frame™ at any time.

**WARNING! USE ONLY RECHARGEABLE NiMH BATTERIES. USE OF ANY OTHER TYPE OF BATTERY MAY CAUSE EXPLOSION, FIRE, OR PERSONAL INJURY. DIGI-FRAME INC. IS NOT LIABLE FOR LOSS OR DAMAGES RESULTING FROM USE OF NON-RECOMMENDED BATTERIES.**

Keep your Digi-Frame™ out of direct sunlight. Direct sunlight may cause damage.

Always use the eject buttons on the memory storage card slots to remove the memory storage cards.

Do not open the case of the Digi-Frame™. There is risk of electric shock, and there are no user serviceable parts inside. Opening the case will void your warranty.

Do not use Digi-Frame™ if conditions could allow condensation to occur, or damage may result.

The screen on the Digi-Frame™ is made of glass and can break. It is covered with plastic polarizing material that can be scratched. Treat it gently, and follow the screen care instructions in the User Manual.



#### The Menu Wheel:

Click the Menu Wheel at any time during the slideshow to enter the control menu. From this menu you can customize slideshows, and take advantage of the many features of the Digi-Frame. While in the menu pressing ; will exit the Menu.

#### The Manual Control Buttons:



**Forward:**  
Press the 4 button to advance to the next picture.



**Play/Pause:**  
Press the ; button to pause the slideshow. If the show is paused press the ; to resume the slideshow.




**Back:**  
Press the 3 button to go back to the previous picture.




#### The Contrast Wheel:

With the Digi-Frame in operation, rotate the contrast wheel to create the optimum display setting.

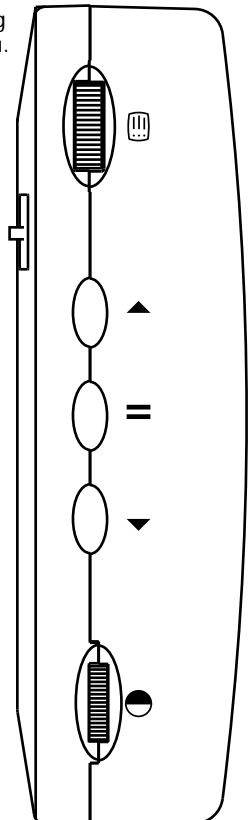


### Changing the Batteries:

The DF-390 contains 4 rechargeable NiMH batteries. Be sure to replace the batteries with NiMH rechargeable batteries only.

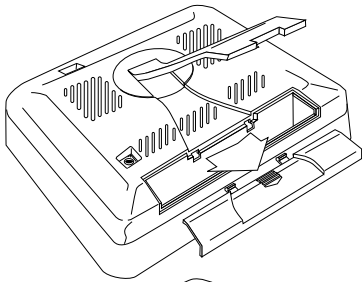

Make sure that the DF-390 is turned off.


Remove the door to the battery storage compartment by pressing on the arrow and sliding the battery door toward the bottom of the DF-390.

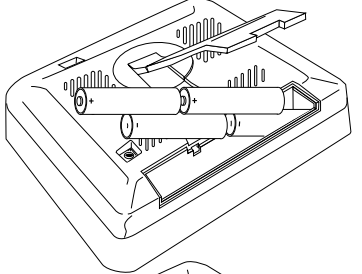

Remove the batteries from the battery compartment.


**Only replace the batteries with NiMH rechargeable batteries!**

Put the new batteries in the battery compartment, taking care to orient the batteries as marked on the case.

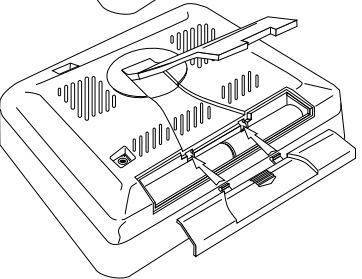

Once the batteries are in place, position the door to the battery compartment on top of the batteries, and push the door toward the top of the unit until it clicks in place.

Your DF-390 uses rechargeable batteries. They need to be charged before using without the power cable. In order to view your digital pictures immediately, plug the DF-390 into a wall receptacle.

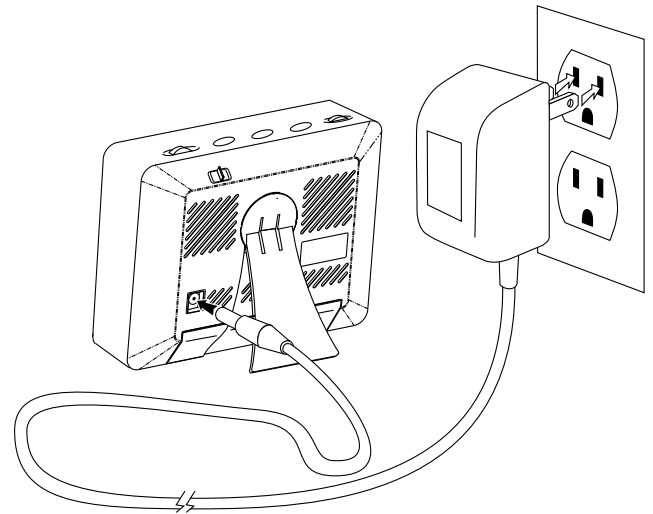

The DF-390 can be used while charging.

The charger should only be connected to:  
100 - 240 V AC 50/60Hz.

Use only the included Digi-Frame charger, other chargers may damage the Digi-Frame or the batteries.

### Important Information About Your Digi-Frame™ Batteries:

The nickel-metal hydride (NiMH) batteries supplied with your Digi-Frame™ and its built-in charging circuitry are designed to provide maximum operating time and charge/discharge cycles. Please note the following important points:

- 1) Your Digi-Frame begins a charging cycle each time the power adapter is plugged into the unit. The charging circuit will charge the batteries until a full charge is detected or until a period of approximately three and one-half hours has passed, after which charging is terminated for safety.
- 2) Your Digi-Frame™ should provide approximately 45 minutes of operation after a full charge. It may take several charge/discharge cycles before new batteries provide their maximum operating time. To cycle your batteries, operate your Digi-Frame™ on batteries until it stops functioning, then plug it into the charger for 3-1/2 hours.
- 3) The brightness of your Digi-Frame's display will decrease as the battery power is consumed. This is normal.
- 4) Never use any batteries other than nickel-metal hydride (NiMH) type, size AA, 1300 - 1500 mAh capacity.
- 5) It is not necessary to have batteries installed in your Digi-Frame™ in order to operate it from its AC adapter. It can be operated without batteries installed.
- 6) It is not necessary to turn your Digi-Frame™ off in order to charge the batteries at full charging rate. The batteries will charge at full rate whether the Digi-Frame™ is switched on or off.

Make sure the Box contains all of its parts.

The DF-390 includes:

- o Digi-Frame™ Electronic Digital Picture Frame
- o Executive carrying case
- o External power supply unit, 100 - 240 V AC, 50/60 Hz.
- o Macintosh™/PC compatible serial cable
- o Macintosh™/PC compatible software on CD-ROM
- o User Manual

Make sure all of these parts are included before continuing. If something is missing contact Customer Service: 1-800-771-5476

Keep this card for future reference.

[www.digi-frame.com](http://www.digi-frame.com)