

Quick Start

Make sure the Box contains all of its parts.

The DF-560 includes:

- o Digi-Frame™ Electronic Digital Picture Frame
- o Three different interchangeable snap-on decorative frames
- o External power supply unit, 100-240 V AC, 60 Hz, and Standard A/C power cable.
- o Macintosh™/PC-compatible serial cable
- o Macintosh™/PC compatible software on CD-ROM

Make sure all of these parts are included before continuing. If something is missing

⚠️ WARNINGS! ⚠️

Do Not Block the Ventilation Holes on the back of the Digi-Frame™ at any time. Never insert or remove any memory storage cards while the power is on. This may cause damage to the memory storage card or the Digi-Frame™. Keep your Digi-Frame™ out of direct sunlight. Direct sunlight may cause damage.


Always use the eject buttons on the memory storage card slots to remove the memory storage cards.

Do not open the case of the Digi-Frame™. There is risk of electric shock, and there are no user serviceable parts inside. Opening the case will void your warranty.


Do not use Digi-Frame™ if conditions could allow condensation to occur, or damage may result.

The screen on the Digi-Frame™ is made of glass and can break. It is covered with plastic polarizing material that can be scratched. Treat it gently, and follow the screen care instructions in this Manual.


1. Make sure that the Digi-Frame is turned off.

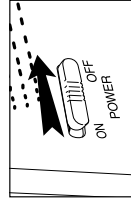


2. Plug the power supply unit into the power supply jack on the back of the Digi-Frame. The power supply jack is recessed deeply into the unit.

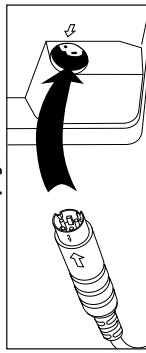


Be sure that the arrow on the connector is aligned with the arrow on the Digi-Frame case.

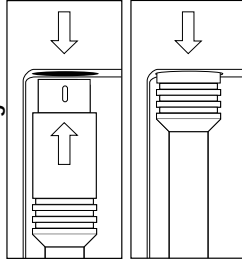


3. Plug the female end of the standard A/C power cable into the external power supply unit. Plug the male end into the wall receptacle.

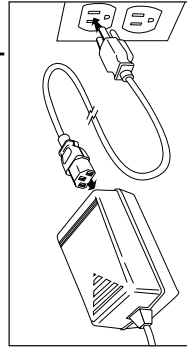


4. Insert a SmartMedia™ and/or CompactFlash™ memory storage card, with JPEG format images stored on it.

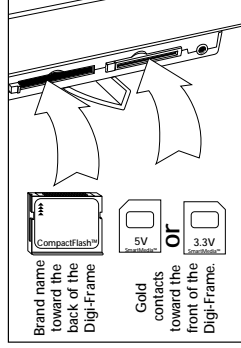

5. Turn your Digi-Frame on.

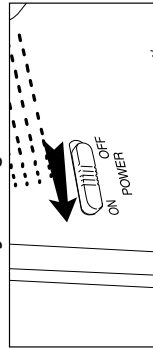


6. Enjoy your Digital Pictures

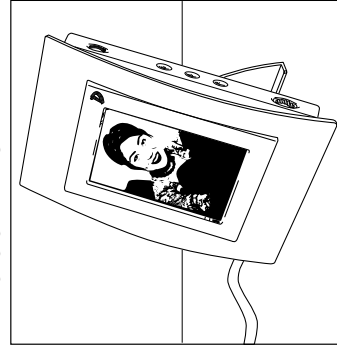

The Slideshow will begin automatically.

Follow the onscreen instructions in the menu system to customize your slideshow.

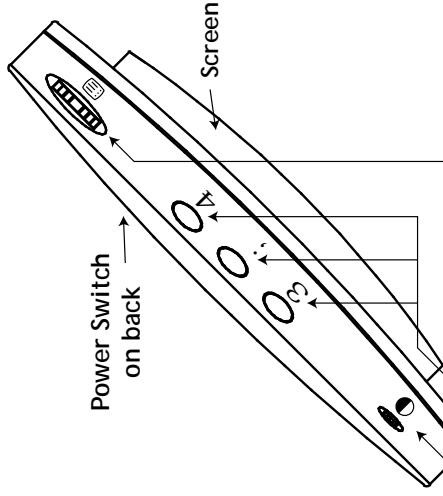

The Menu Wheel:

Click the Menu Wheel at any time to enter the control menu. From this menu you can customize slideshows, and take advantage of the many features of the Digi-Frame. While in the menu pressing; will exit the Menu.



The Manual Control Buttons:

Forward:

Press the 4 button to advance to the next picture.



Play/Pause:

Press the ; button to pause the slideshow.



If the show is paused press the ; to resume the slideshow.

Back:

Press the 3 button to go back to the previous picture.



The Contrast Wheel:

With the Digi-Frame in operation, rotate the contrast wheel to create the optimum display setting.

